


Wash&Drain™

Dishwashing bowl with
straining plug

Plug settings


Sealed position

Water remains in the bowl

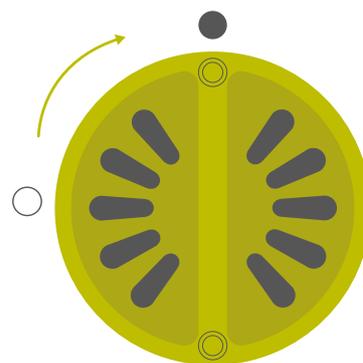

Drain position

Water drains out of the bowl

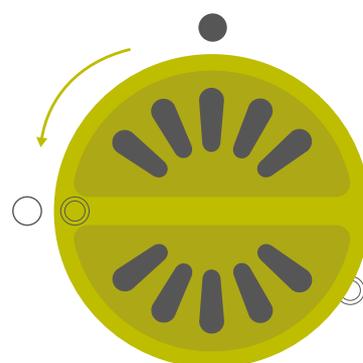

Food disposal

Remove the plug to dispose of gathered food

